

Comfort 50 Elegance Cellphone User manual



This guide contains description of main functions of a mobile phone.

The content of this manual is correct. Description of some features may vary due to changes in software or provider services change. The Company reserves the right to change specifications without notice.

This phone is designed for mobile use, make or receive calls, send SMS messages, access the Internet (if any), and others. Turn off the phone if you are near chemical plants, gas stations and other places where explosives may be stored.

Keep phone out of reach of children.

Turn off the phone while on board an aircraft, and do not use the phone during the flight.

Turn off the phone in view of medical devices.

The warranty does not cover non-original parts.

Never attempt to disassemble the phone by yourself.

If necessary, contact the service center.

Do not charge the phone without the battery.

Charge your phone far from flammable and explosive materials.

To avoid demagnetization, keep the phone away from credit cards.

Avoid pouring fluids over the phone. If a liquid gets over the phone, you have to remove battery and contact a service center.

Do not use in areas with extremely high or low temperatures. Never leave the phone exposed to direct sunlight, high humidity or dust.

Do not wash the phone, do not use detergents.

Wireless phones are sensitive to interference. It may affect device stability.

Use only recommended accessories and batteries.

Use the device only as recommended.

Do not dispose battery on fire!

Utilize battery according to law requirements to avoid persecution.

Obtain information on safe disposal of lithium-ion batteries at your nearest service center.

Note: Device manufacturer reserves the right to supply batteries other, than specified.

press it to exit the menu and return to the standby state. You can hold it for two or three seconds can power on/off the mobile phone

Direction key

Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate.

Left and right soft key

The bottom line on the screen displays the functions of the Left and Right soft key.

OK key (SOS key)

Press it to confirm a selection. Press 3 sec can call the SOS number.

Number keys, * key and # key

Press number keys 0 through 9 to input or edit state to input numbers and characters;

In idle screen, you can press left soft key then press * to lock/unlock keypad.

Press two times the key * to input "+" in standby interface. When the symbol "+" appears,

Press the * key quickly to input "P" or "W", "P" and "W" are used for calling the extension; "+" are used for dialing an international call.

Technical specifications

Phone

Dimensions (W×D×H): 131.2*59.6*13.5mm

Weight: 102g

Lithium battery: 1000 mAh

Continuous standby duration: (Relates to network status) 200H

Continuous conversation duration: (Relates to network status) 100Min

Please refer to their labels for other data related to the battery and the charger.

Getting started

Installing the SIM Cards and the Battery

A SIM card carries useful information,

including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.


Note:

After powering off your mobile phone, wait for a few seconds before removing or inserting a SIM card.

Exercise caution when operating a SIM card, as friction or bending will damage the SIM card.

Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.


Installation

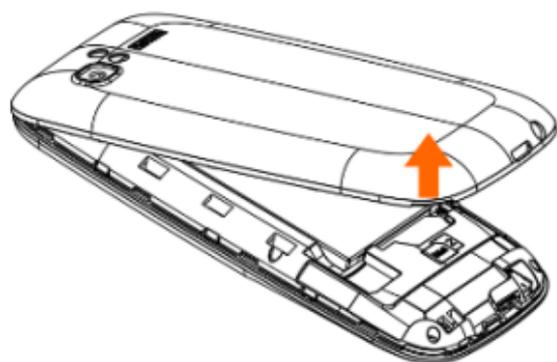

Hold the End key for a while to power off the mobile phone. Take the back cover above the battery


away.

Take the battery away.

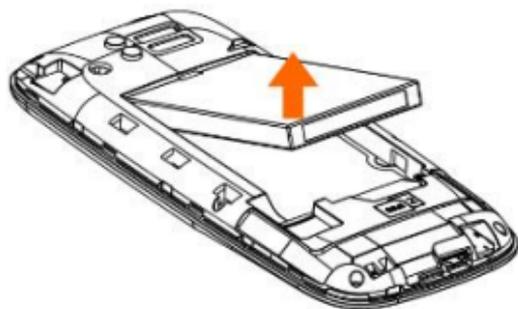

Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold

plate of the card facing down, till the SIM card cannot be further pushed in.

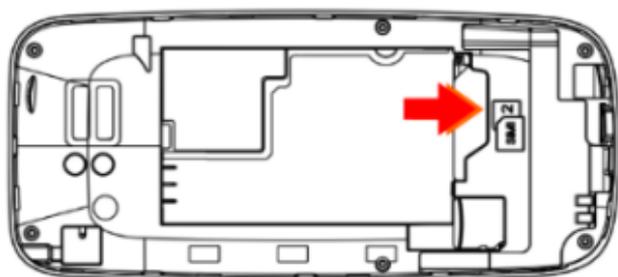

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

Using code

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key. If you input a wrong code, clear it and then input the correct code.

Phone lock code

The phone lock code may be set to prevent your

mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1122 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times. Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
- Then input the new PIN and press the OK key.
- Input the new PIN again and then press the OK key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

***Note:** The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.*

PUK

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.


Barring code

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

Installing T-Flash Card

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, open its latch, place its indented side downward, insert the card into the card slot, and then close the latch.

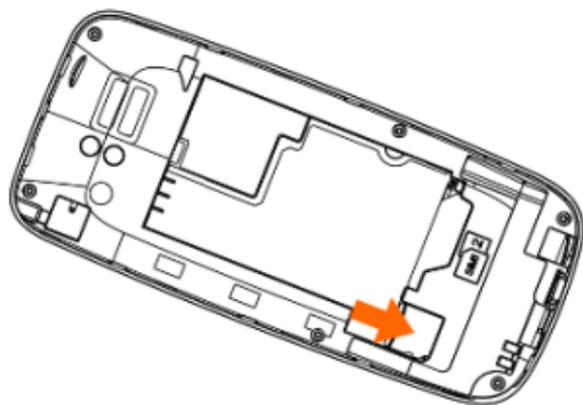

To remove the T-flash card, open its latch and slightly take the card out. And then close the latch.

Note:

The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.

The T-Flash card is a miniature object. Keep it

out of the reach of children for fear that children swallow it!

Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked.

Battery level indication:

Your mobile phone can monitor and display the battery state.

Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.


When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.

A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

Install the battery into the mobile phone before charging the battery.

Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.

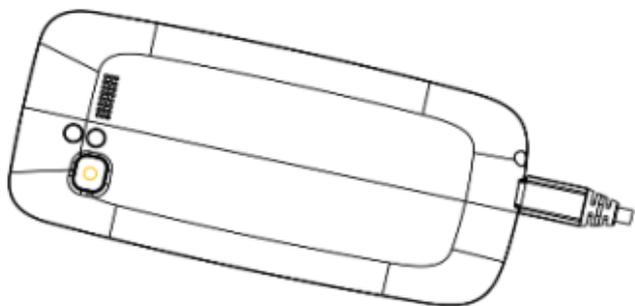

Insert the plug of the travel charger to an appropriate power outlet.

During the charging, the battery level grid in the battery icon keep flickering till the battery is fully charged.

It is normal when the battery becomes hot during the charging period.

The battery icon does no longer flicker when the charging process ends.

Note:

Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.

Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.

Power off the mobile phone before removing the battery.

The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.

During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.

Immediately stop using the battery if the battery produces odor, overheat, cracks, distort or has other damage, or if the electrolyte leaks.

The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

Note: *To guarantee your personal safety and protect*

the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.

Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 1122.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

Dialing Calls

In the standby interface, press Dial-pad enter virtual dial pad, press number keys to input the area code and the telephone number, and then press the dial key to dial a call.

Using the Headset

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

Using the Menus

Phonebook

The mobile phone can store up to 100 telephone numbers. The telephone numbers that a SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook. The phonebook search function enables you to view contacts. You can search a contact as required from the phonebook. Select this option, in the **edit** interface, input the name of the contact you want to search or the first letter(s) of the name. All the contacts meeting the search condition are listed. Press the Up and Down direction keys to browse the contacts and select contact.

Messages

If the short message memory is full, a blinking

message icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages. If the destination user has received the short message you sent and the short message delivery report function is activated, the phone will give off a message report alert tone.

Write message

Access this menu to create a text message.

Inbox

Received Messages are listed in this menu.

Outbox

The messages which are sent failed are stored in the Outbox.

Drafts

Draft messages are listed in this menu.

Templates

You can create pre-defined messages in this interface.

Call logs

All calls

All calls are in the list. such as missed calls, dial calls, received calls, rejected calls and so on.

Missed Calls

You can view a list of the latest missed calls.

*Note: When the mobile phone indicates that some calls are missed, you can select **Read** to enter the missed calls list. Navigate to a missed call and then press the **Dial** key to dial the number that originated that call.*

Dialed Calls

You can view the latest dialed calls. Choose **dialed calls** and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

Received Calls

You can view the latest received calls. Choose **received calls** and then select a received call to delete, save, dial, or edit (or send a short message to it).

Delete all

You can delete all the latest call records.

Multimedia

Camera

The phone is provided with a camera, which supports the photographing functions. In the capture interface, roll the phone to align the camera to the picture and then press OK key to capture photos. Pictures will be saved in the file system of the phone or the memory card.

Video recorder

This function enables you to record dynamic pictures. In the capture interface, press OK key to capture videos clip.

Music player

You can use this function to play audio files. By pressing the direction key you can control the playing process of audio player: play/pause

(OK key) , switch to last song/next song (press left or right direction key) , fast forward (press and hold right direction key) and rewind (press and hold left direction key). In audio player interface, you can press UP and DOWN keys to control volume.

Video player

Use this function to play video files. By pressing the direction key can you control the playing process of video player: play/pause (OK key) , fast forward (press and hold right direction key) and rewind (press and hold left direction key). In video player interface, you can press UP and DOWN keys to control volume.

Image viewer

You can view the pictures in the T-card by this function. Press the direction key to choose them and left soft key edit the pictures. Press right soft key to return last interface.

FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. Before using it, you should insert the earphone as antenna. In FM radio interface, 4 or 6 key to search channels manually, OK key to play/pause the playing process of the current channel.

Recorder

The phone support WAV and AMR. The AMR takes the compression algorithm. So in the same memory condition, it has longer recording time than WAV.

Settings

User Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into three scenarios: **Normal, Silent, Outdoor**. In the standby mode long press # can switch quickly to silent mode.

Phone settings

Date & time: Set the time, set the date, time format, date format Time zone and detail time of the location.

Note:** If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering **on the mobile phone after recharging.

Language settings: Select the display language and writing language for the mobile phone.

Shortcuts settings: Customize the shortcut functions of the Up and Down direction keys. In the standby interface, you can press a direction key to directly enter the function

menu corresponding to that direction key.

Auto power on/off: Set the time when the mobile phone will be automatically powered on or off.

Call Settings

Dual-SIM: You can set standby mode, reply by original SIM and set SIM name through this function.

Call divert: this network function enables you to forward incoming calls to another number you have previously specified.

Call waiting: After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.

Call barring: The call barring function enables

you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

Others: You can set call time minute reminder, Auto call record, auto redial, Vibration when connected through this function.

Security settings

This function provides you with related settings about safety use

PIN: To activate PIN lock, you need to input the correct PIN code. If you set PIN lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a

wrong PIN for three consecutive times; you need to input the PIN Unblocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.

Modify PIN2: To change PIN2 code of PIN code.

Phone locked: The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The initial password is 1122.

Modify the cell phone password: to change phone password.

Auto keypad lock: The function enables you to lock/unlock the keypad. Set the auto locking time, off, 5s, 15s, 30s, 1min and 5mins are available

Blacklist: The function enables you to on/off the ability of blocking incoming calls and SMS and to create list of contacts wich have to be

block

Tools

Bluetooth

You can transfer data, such as music to other device by Bluetooth. Search the device and receive/transfer data. The received data is automatically stored in the directory.

Alarm

You can set three alarms through this function.

My Files

The phone supports the memory card. The capacity of the memory card is selectable. You can use the file manager to conveniently manage various directories and files on the memory card and in the phone.

Choose this option to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not changed the

directory, the root directory contains the default folders only.

Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

Calculator

The calculator can add, subtract, multiply and divide.

Turn light on/off

You can turn on/off the flashlight by this function or long press 0 key in idle interface.

UV light

You can turn on/off the light to identify the currency by this menu.

Dial Num Voice

You can turn on/off the function by this menu.

SOS

The menu provided SOS call function.

SOS Status

Long press web key to activated SOS function in idle or lock screen interface.

SOS Contact

You can set five SOS numbers.

SOS message

You can predefined the SOS message content.

Services

This is the STK function provided by the operator.



SIGMATM
MOBILE

www.sigmamobile.net