

Comfort 50 Light Dual SIM Mobile phone User manual



Notice: This document states the instruction regarding the mobile. Information contained in this document is subject to continuous update without further notice due to improvement and update of products and technologies. Description in this manual may be different from the mobile phone, when you change the installed software, SIM card or service provider. Thanks for your understand very much!

Security Precautions

To ensure that you can use your mobile phone safely and effectively, read the following information carefully before you use phone.

Safe Power-on

Do not use phone in places where mobile phones are forbidden, or may cause interferences or dangers.

Traffic Safety First

Do not use phone while you drive.

Shut-down in Restricted Areas

Comply with related restriction rules or regulations. Shut down the mobile phone on the airplane, or around inflammable articles, chemicals, or medical appliances.

Interference

Mobile communication may be affected by radio interferences, so the performance of phone is affected accordingly.

Waterproof

This mobile phone is not waterproof. Keep it dry under any situation.

Keep the Mobile Phone Out of Reach of Children

Phone and all its assemblies should be kept out of reach of children.

Assemblies and Batteries

Please use the company designated the battery and charger, Failure to comply with this rule may result in explosion of the mobile phone.

Professional Service

Do not disassemble the mobile phone and its assemblies by yourself. The mobile phone is serviced only by authorized organizations.

Key Layout



This phone supports 2G networks:
GSM900/1800MHz.

Power-on and Power-off

When phone is in the power-off status, press and hold the **【End key】**  to power on phone. When phone is in the standby status, press and hold the **【End key】** , to power off phone.

Locking keypad

Lock the keypad in two ways:

Automatically locked: According to the “Settings-Phone settings-Auto keypad lock” menu, the phone is automatically locked by the keypad lock time.

Manually locked:

In the standby screen, press **【Send Key】**  and **【* Key】** to enter the locked state.

Basic icons

Icon	Meaning
	Network signal strength of SIM
	Current battery capacity
	There are unread short messages on SIM
	There are un-received calls on SIM

	There are forwarded calls on SIM
	The alarm is enabled
	Keylock

Dial a call

On the standby screen, press keys on the key board to enter the telephone number directly.press 【Send key】  to dial up.

Search a number in the call records:

press 【Send key】  to dial up.

On the page of call records:

press 【Send key】  to dial.

Fast dial

Enter main menu>Phonebook>fast dial
 Activate Fast Dial function if not active.
 Populate Fas dial phone list.

To dial: On the standby screen, long press number key, that corresponds to a number in fast dial list.

SOS Call

You can set five emergency contacts. When the **【SOS key】**  is pressed and held for a while, phone automatically sends short messages to these contacting numbers cyclically, until a call is accepted. To cancel emergency calling press and hold SOS key.

Receive a call

When there is an incoming call, perform the following operations:

Press the **【Send key】**  to receive the incoming call. If the earphone is inserted, you are in the earphone mode and can receive the incoming call by using the earphone.

Press **【End key】**  to refuse the incoming call.

Ring Tone

Start the function:

Select the “Settings ---> Ring Tone” menu to set ring types and volumes for incoming calls, message, alarms, keypad tones, alert type, ring volume, ring type.

	The current profile is the standard profile.
	The current profile is the conference profile
	Headset mode
	Mute
	Vibrate then ring
	Vibrate and ring

Phonebook

Save a Number

Save a telephone number through one of the following ways:

1. Save the number of a dialed call, a received call or an un-received call to the phonebook.
2. Add a new telephone number directly in the phonebook function.

Advanced Function

Fast dialup: You can define fast dialup numbers for number keys 2-9 by adding them from the phonebook or entering them manually. After fast dialup numbers are defined, you can press and hold a number key to make fast dialup.

SMS Function

Read a Message

Read the short message through one of the following two ways:

1. When a new message arrives under the standby screen:

Read the short message on the SMS page. Press **【Send key】** , press **【Up key】** or **【Down key】** to change lines.

2. Read a message from the inbox.

Select a short message from the inbox.

On the SMS page, you can press the dialup key shortly to dial a call to the message sender.

Function operations:

- **Delete:** Delete the selected short messages.
- **Reply:** Respond to this short message.
- **Forward:** Forward the selected short message to other contacting personnel.
- **Advanced options:** Call sender, Use the number, copy or move the short message.

Write a Message

Start this function:

Enter this function from the Main menu, Messages, Write message.

Note: On the SMS editing page, press the [#] key to change the input method.

Save sent messages:

By default, sent messages are not saved. You can select “SMS Settings ---> Common Settings” to modify the configuration. Select the option of the save sent message

FM

Start FM:

Phone provides the FM function. You can enter the FM page to receive the FM radio or insert the earphone to receive it.

Function operations:

- **【volume up key】** : increase the volume
- **【volume down key】** : decrease the volume
- **【UP key】** : switch to the previous channel in the FM list
- **【DOWN key】** : switch to the next channel in the FM list
- **【Send Key】** :enter option operate list,
- **【END key】** : Suspend or play the radio.
- **【Power off】** press “option --- Exit”, power off FM radio

Audio Player

Start the music player:

You can use the Audio player to listen to the music in the mobile phone or in the T-Flash card. If you select the T-Flash card, phone automatically updates all music in the

T-Flash card to the playlist.

Function operations:

- **【Up key】** : increase the volume
- **【Down key】** : decrease the volume
- **【4 key】** : play the previous song
- **【6 key】** : play the next song
- **【5 key】** : suspend or play the music

Alarm

You can set five alarms on phone. Enter the alarm page and perform the following operations:

Start the alarm:

. Enter the alarm page from the main menu
“Main menu --- Organizer --- Alarm”

Function operations:

Status: Start the alarm. By default, the alarm is disabled.

Time: Set the corresponding time.

Repeat: Select Once, Everyday, Custom(Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday)

Volume: setting alarm volume level

Alarm tone: setting alarm

Alert type: Vibrate and ring, Ring only, Vibrate only

Calendar

Start the calendar:

“Main menu --- Organizer --- Calendar”

Function operations:

Jump to date: to pass to specified date

Start of week: To set Monday or Sunday as first day of week.

Restore settings

In the main menu, go to Settings--Restore Settings. This menu allows you to return the phone settings to the factory settings. The default code - 1122