

# Comfort 50 Mini3

## Cellphone

### User manual



This guide contains description of main functions of a mobile phone.

The content of this manual is correct. Description of some features may vary due to changes in software or provider services change. The Company reserves the right to change specifications without notice.

This phone is designed for mobile use, make or receive calls, send SMS messages, access the Internet (if any), and others. Turn off the phone if you are near chemical plants, gas stations and other places where explosives may be stored.

Keep phone out of reach of children.

Turn off the phone while on board an aircraft, and do not use the phone during the flight.

Turn off the phone in view of medical devices.

The warranty does not cover non-original parts.

Never attempt to disassemble the phone by yourself. If necessary, contact the service center.

Do not charge the phone without the battery.

Charge your phone far from flammable and explosive materials.

To avoid demagnetization, keep the phone away from credit cards.

Avoid pouring fluids over the phone. If a liquid gets over the phone, you have to remove battery and contact a service center.

Do not use in areas with extremely high or low temperatures. Never leave the phone exposed to direct sunlight, high humidity or dust.

Do not wash the phone, do not use detergents.

Wireless phones are sensitive to interference. It may affect device stability.

Use only recommended accessories and batteries.

Use the device only as recommended.

Do not dispose battery on fire!

Utilize battery according to law requirements to avoid


persecution.

Obtain information on safe disposal of lithium-ion batteries at your nearest service center.


***Note: Device manufacturer reserves the right to supply batteries other, than specified.***

# SIM installation


1. Remove battery cover

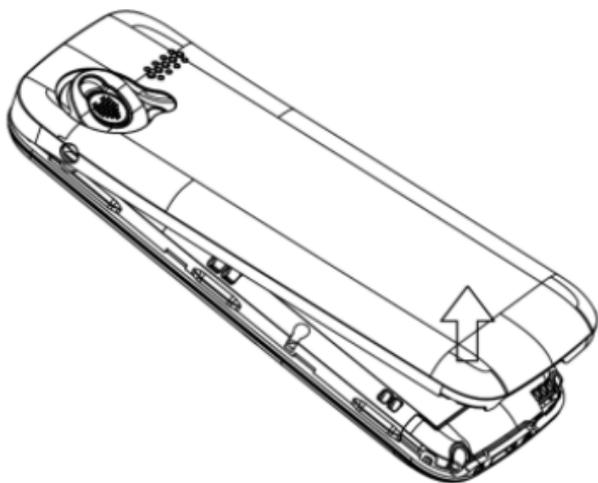


2. Remove battery

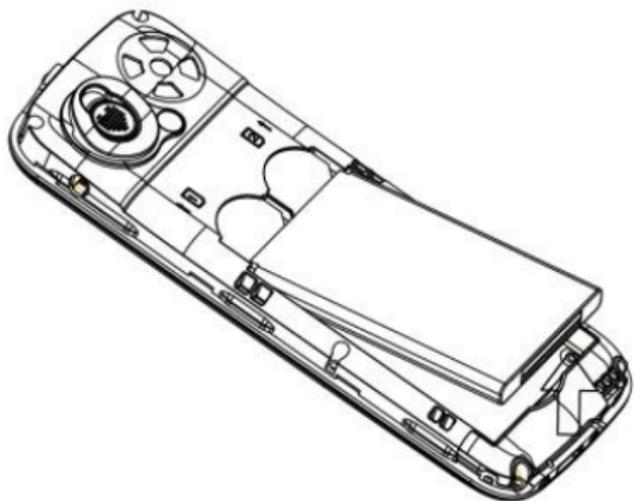


3. Insert SIM-cards to appropriate slots according to picture below

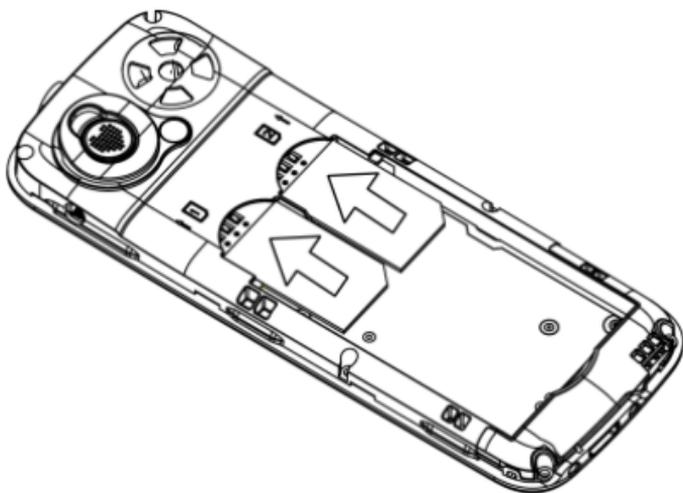

4. Place battery

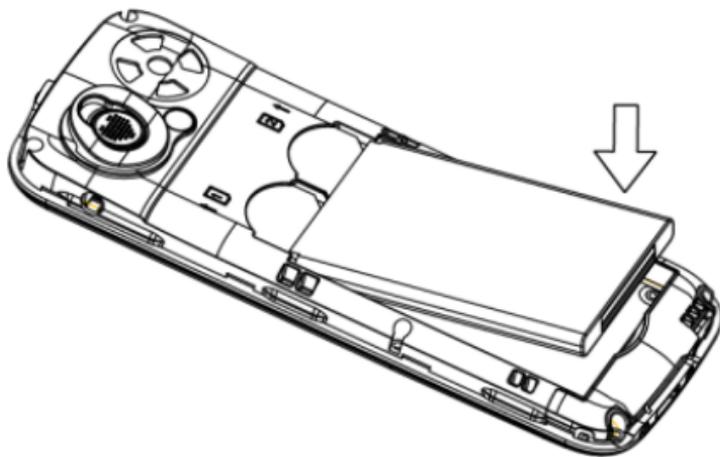

5. Secure battery cover

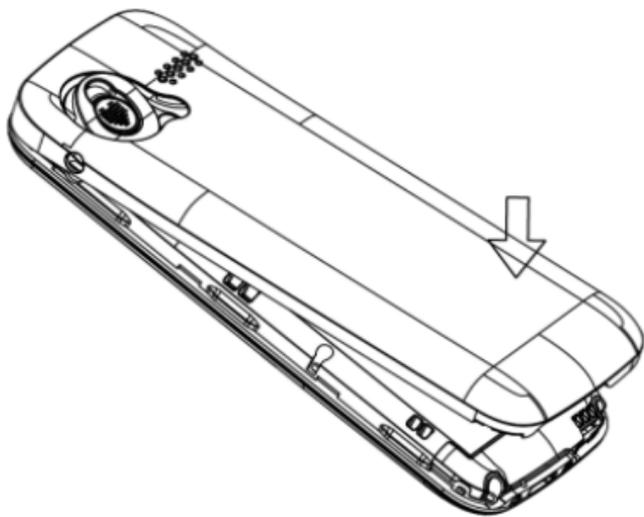

## Phone details



## Power ON\OFF

To power on/off, press and hold "Cancel"



button for a while.

## Locking and unlocking

Long press "\*" to Lock\unlock

## Main buttons

|  | <b>Functions</b>   |
|--|--|
| <br><b>OK button/Call</b> | <p>In standby mode: view the call log.</p> <p>During a call, receiving an incoming call. Call: make a call to the dialed number.</p> <p>Confirmation and shortcuts Favorites menu.</p> |
|                         | <p>Short press:<br/>return to previous menu and to reject the</p>  |

## Cancel button

call when an incoming call.

Long press: to switch on/off.

Short press in FM radio mode: to switch on/off the radio; long press: to exit FM-radio.

## Navigation keys Up/Down



In Idle mode press "Up" to enter the main menu; press "DOWN" to enter Shortcuts; in menu - use UP and DOWN - to move to the desired menu or function. Call mode: to

|  |  |   |
|--|--|---|
|  |  | adjust volume.  |
|  |  | Press and hold until sound signal. Phone will automatically call emergency numbers and send SOS message |
|  | <b>0</b>   | Short press: to dial "0"<br>Long press: to power on/off flashlight.                                     |
|  | <b>2-9</b>   | Long press: fast dial   |
|  | <b>*</b>   | Short press: to dial "*",<br>"+".<br>Long press: lock/unlock keyboard                                   |
|  | <b>#</b>   | Short press: to dial  |

|  |  |  |
|--|--|--|
|  |  | "#".<br>Long press: switch to silent mode/normal mode. |
|--|--|--|

## Main screen icons

| Icon   | Value             |
|--|-------------------|
|    | network indicator |
|    | Battery level     |
|    | Unread SMS        |
|  | Missed call       |
|  | Call divert       |
|  | Alarm active      |



## Keypad lock

### **Call**

Dial phone number using numeric keypad

or scroll to call log and press "OK/Call"



to make a call. You can make a call from "Contacts" as well.

### **Speed dial**

Go to the main menu -> "Contacts" -> "OK" -> "Settings"> "Speed Dial".

In this menu, you may save eight numbers for speed dial for 2-9 keys. Long press 2-9 to dial a number.

### **SOS call**

You may save up to 5 numbers for emergency in "Settings» -> «SOS Settings".

Long press SOS button  to automatically call to preset emergency numbers, and send short message to the first preset number.

## **Receiving a call**

To accept incoming call, press "OK/Call"



You may also receive incoming calls using headset connected to phone. Press



to reject an incoming call.

## **Sounds and notifications**

Go to main menu "Settings" -> "Melody". Here you may choose Ringtone Volume,

melody, tunes for SMS, voice keyboard, key press volume, on/off melody.

## **Phonebook**

Phonebook is used to search stored contacts, add new contacts and speed dial settings.

*Ways to save new contact in your phonebook:*

1. Save dialed, received or missed calls from call log.
2. Save a new contact directly from "Contacts" menu.

## **SMS-messages**

### ***Incoming SMS-messages***

When a new message comes, sounds SMS

melody and icon  appears at the top of main screen.

To read new message, click "OK/Call" 

*Viewing messages via "Incoming" menu.*

Go to the main menu - "Messages" -> "OK" -> "Incoming". Choose a message to view from the list using navigation keys.

You may dial the sender of SMS-message. While reading, click "OK" -> "Call the sender."

*SMS options:*

Viewing: Viewing the message;

Reply: reply to the message;

Call: dial the sender;

Forward: forward the message to another contact;

Delete: Delete the selected message;

Delete all: delete all messages;

### ***Send SMS-message***

Go to main menu - "Messages" -> "New SMS".

Note: to change input method when writing a message, press "#".

### ***Saving sent messages:***

By default, sent messages are saved. To cancel saving messages, go to the menu "Messages" - "OK" - "Settings" - select "Do not save sent." After activating this function, sent messages are not stored in your "Sent" folder.

***Note: following functions from "Media" menu require SD card installed.***

## **Camera**

In main menu go to "Media" -> "OK" -> "Camera". To take a picture, press "5". Camera options let you go to camera, view and send photos, set photo as wallpaper, view image size and so on.

## **Gallery**

From main menu go to "Media" -> "OK" -> "Gallery". This menu allows you to view, send, delete, rename images and use them as wallpaper.

## **Video player**

From main menu go to "Media" -> "OK" -> "Video player". Options are to play, forward, rename, and delete videos.

## **Audio Player**

To enable audio player go to main menu, "Media"> "Audio Player".

You may use the phone's music player to listen to music files stored on the memory card of the phone. Options include: play, add, delete file, delete all and choose a listening mode by setting.

To adjust the volume, press the navigation keys "Up/Down". Pause/play : press "5".

To move to the next/previous- press "6"/"4" respectively.

### **Sound recorder**

From the main menu go to "Media" -> "OK" -> "Recorder." Use "Options" menu to make new record, view existing entries, view settings.

### **FM-radio**

To enable FM-radio, go to the main menu - "Media" -> "OK" -> "FM-radio."

To exit the FM-radio, press and hold the "End" . To stop playback/playback, click "End" button .

Press "\*" or "#" to decrease or increase volume.

## **Calendar**

To access Calendar menu, go to the main menu at the "Organizer" -> "OK" -> "Calendar."

### *Features*

1. Go to a specific date:

Go to today: go to the current date.

## **Alarm**

In main menu select - "Organizer" -> "Alarm".

*Options:*

1. Status: switch alarm on/off. Alarm is off by default.
2. Time set: set the desired time for an alarm.
3. Repeat: select an alarm mode: "Once", "Daily", "Selected Days".
4. Sound the alarm: select a ringtone for the alarm.

## **Calculator**

From the main menu, select "Organizer" -> "OK" -> "calculator" that allows you to perform simple arithmetic. Enter a number and use nav keys to select desired action.

"Organizer" menu also include File manager, Bluetooth and Services.

## **Factory Reset**

This function restores some of mobile phone settings to factory defaults. To use reset you have to enter correct password mobile phone. Default phone password is: 1122.

## **Shortcuts**

In Idle mode press "Down" key to enter Shortcuts: Messaging, Phonebook, Camera, FM radio, Torch, Tone settings, Alarm,



**SIGMA**<sup>TM</sup>  
MOBILE

[www.sigmamobile.net](http://www.sigmamobile.net)