

Thank you for buying the X-style 18 mobile phone. This manual includes the description of the main functions of the phone.

X-style 18 allows you to use 2 GSM SIM cards in dual standby mode. This means that in standby mode both cards are online, whereas during the call 1 card works in active mode and 1 other card is unavailable.

The content of the manual is correct. The description of some functions may vary due to changes in software or provider services. The company keeps the right to make changes to the technical specifications without previous warning.

Key remarks on safety measures

This phone is designed for mobile use, for calling and receiving calls, sending SMS messages, surfing the Internet (if configured) etc.

Read the section below very carefully and strictly follow the instructions.

The phone doesn't contain any materials harmful for health.

- Do not use the phone out in the open during thunderstorms.
- Do not subject the battery to high temperatures, explosive and flammable liquids.
- Turn off the phone in situations when using it can cause danger or other difficulties.

- Do not put the phone in heating devices such as microwave ovens, stoves, or heaters.
- Do not try to open the mobile phone's frame. If the phone or any of the accessories do not work properly, please contact the closest authorized service center.
- Use only the accessories and charging devices assigned to this model. Do not use defective or second-hand chargers.
- Do not let the battery short circuit.
- If you use any personal medical devices, please make sure that the device has sufficient protection from radiation in the radio-spectrum. Turn off the phone in medical institutions if it is required according to the inner regulation rules.
- Do not use the phone while driving. Follow the rules for mobile phone usage behind the wheel.
- Keep the phone, as well as all its components and accessories, in a place inaccessible to children and pets. They may damage the device or accidentally choke on small details.
- Avoid bringing the phone into contact with water.
- Do not use potent chemicals, dissolvents or bleaches to clean the phone.
- Do not subject the device to direct sunlight.
- To avoid getting heavy metals, acids or chemicals in the water or the ground and causing significant damage to the environment, the used battery should be utilized by the end of the term of service according to the

requirements of the law. Failure to comply with the legislation leads to legal accountability.

More information on the safe utilization of lithium-ion batteries may be obtained at the closest specialized service center.

Specifications


Phone, frequency bands	GSM 900: 880-915 MHz (Tx), 925-960 (Rx) GSM 1800: 1710-1785 MHz (Tx), 1805-1880 (Rx)
Number of SIM-cards	2 miniSIM. Dual SIM Dual Standby mode
Messages	SMS
Mobile internet	GPRS
Bluetooth version and frequency band	V3.0, 2400-2483.5 MHz
Display	1,77", colour LCD, 160x128 pix
Supporting formats	MIDI, AAC, MP3, WAV, JPG
FM-radio	87,5-108,0 MHz (built-in antenna)

Micro-SD	Up to 32 GB
Battery	Li-Ion, 1000 mAh
Maximum radiation power in the frequency bands the radio equipment works on	Bluetooth: 4.32 dBm (2.7 mW). GSM 900: 33 dBm (2 W) GSM 1800: 29.2 dBm (832 mW).

Package includes

- Mobile phone x1
- Battery x1
- Charging device x1
- User manual x1
- Warranty card x1

Phone's appearance

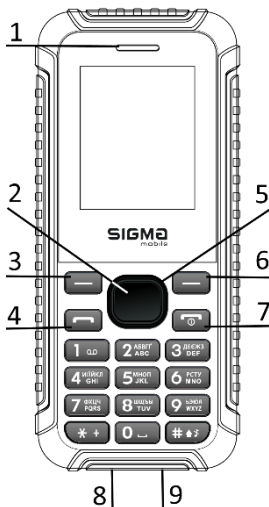

1	Receiver
2	Central key


3	Left soft key (LSK)
4	Calling\receiving a call
5	Navigation keys
6	Right soft key (RSK)
7	Reject/cancel/press and hold to turn the phone on or off
8	MicroUSB port
9	Headphone jack

Keys specification

Buttons	Functions
0-9 keys	Press: to dial a number 1 through 9. Press and hold the keys 2-9: to speed dial the previously installed numbers.
* key	Press to enter the characters *, +, P, W. Press and hold to lock or unlock the keyboard.
# key	Press to enter the symbol #.

	Press and hold: to switch user profiles from General to Silent.
Left soft key (LSK)	In standby mode – press to open the Menu. Choosing between Options in the settings.
Right soft key (RSK)	In standby mode – press to open the Phonebook; returning to the previous menu. In FM radio mode: press to exit the FM radio menu.
Central key	Menu/OK.

Inserting the SIM cards and memory card

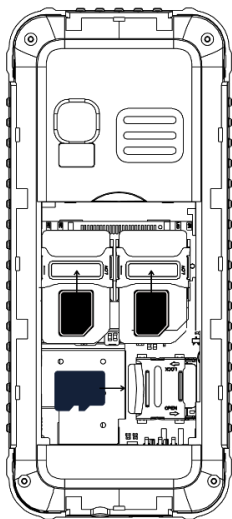

Open the back cover and take out the battery. Insert the SIM cards in the proper device slots. Then insert the microSD card, if needed.

Reinsert the battery, making sure that the battery contacts fit the phone contacts.

Be careful, as broken card or battery contacts lead to device failure and canceling warranty.

Close the back cover.

Turn on the phone by pressing and holding the End Call button.

We recommend fully charging the battery before first use.

The meaning of symbols on the screen

Symbol	Meaning
	Connection signal
	Battery charge indicator
	New message
	Missed call
	Silent profile activated
	Outdoor profile activated
	Meeting profile activated

	Alarm clocks are on
	Bluetooth mode is on
	GPRS internet is on

Power the device on\off

To turn on the device, press and hold the “End Call” button until the device screen is activated.

To turn off — press and hold the “End Call” button until the device turns off.

The device is locked automatically (if automatic locking is enabled) by pressing and holding the * key. You can unlock the phone the same way, by pressing and holding the * key.

Making a call

To make a call, dial a number on the numeric keypad in local or international format, or select a number from the Phonebook, and press the call button. Choose the SIM card to make the call from. To end the call, press the “End Call” button.

During the call you can also: switch to the speakerphone mode, start a recording of the call, add another caller to communicate in conference mode, turn the microphone on/off, etc.

Using the phone's Menu

To access the Menu, press the Left soft key (LSK) or the Central key.

The menu includes the following items:

Contacts: contains contacts stored in the phone and on SIM cards.

Messaging: send messages and read incoming messages.

Multimedia: this menu contains the device's media functions: gallery, audio player, video player, voice recorder.

Call logs: a register of incoming, outgoing and missed calls.

FM radio: you can turn on the FM radio from a separate menu.

My Files: to view files stored on the memory card.

Application: alarm clock, calendar, Internet browser, calculator, Bluetooth, SIM menu.

Settings: settings for calls, screen, phone, security, profiles, network.

Games.

Contacts

The Contacts menu contains contacts stored in the phone and on SIM cards. The phone's memory is intended to store 500 contacts.

Contacts are listed in alphabetical order. The search bar allows you to find contacts. To switch the method/language of the search press the # key.

To view the contact, select it with the cursor and press the Central key.

To make a call, press the Call button.

Additional options may be accessed with the left soft key.

New contact: add a new contact. Before creating one, you have to choose where to save the contact.

Send SMS: create and send a text message to a contact.

Edit: edit the contact.

Delete: delete the selected contact.

Copy: copy contact to the phone or the SIM card.

It is also possible to: view the memory status and delete all contacts, make a backup (export) or restore contacts (import), but only if the memory card is inserted.

When backing up contacts in the root of the memory card, a system file named ~vcard.vcf is created. When restoring contacts, data is taken from the same file.

Add a new contact: select "New" in the options, choose where to save the contact, enter a name and phone number, click "Save"

For one contact, you can add the following data: Name (string length – 20 characters), Phone number, Group.

Messaging

This menu contains everything you need to send, store, view and delete SMS messages.

Write message: select to write and send (or save) a new message.

Inbox: folder with received messages.

Outbox: folder with sent messages.

Drafts: unfinished messages.

Sentbox: messages that have been sent.

Settings: settings for sending SMS.

The Settings menu allows you to set up the SMS center numbers for both SIM cards, the validity period of the message, the means of receiving delivery status reports, adjust the settings for saving messages, and turn push notifications on/off.

Multimedia

Note: It is best to use the following functions in the menu "Multimedia" with an installed memory card.

This section contains programs for working with photos, videos, and sound.

Image viewer: for viewing images.

Audio player: for listening to audio files. Press the Central key to play/pause. To move to the next/previous file press Right/Left. To create a playlist, copy the music files on the memory card to the Audio folder. To change the settings, go to List→Options→Settings.

Video player: for viewing videos.

Sound recorder: for recording sound.

Call center (Call logs)

The Call center contains a register of incoming, outgoing and missed calls and allows you to: view information, dial a contact number, send an SMS message, add a new number to contacts, add a number to the black list, delete call information, etc.

FM radio

Note: In this model, the FM radio functions with a built-in antenna. To improve reception quality, it may be necessary to connect a wired headset as an antenna. The sound of the FM radio and audio player can be transmitted to an external speaker or a wired headset.

To turn the radio on/off, press the Central key. To search for radio stations, press Right/Left. For precise frequency tuning press Up/Down. In the Options menu you can search for channels automatically and manually, view saved stations and enable/disable background playback.

My Files (File manager)

The file manager allows you to work with files in the phone's memory and on the memory card. Such operations as copying, moving, deleting and creating folders are available.

Application

The following programs are available in this menu:

Alarm: allows you to set up several alarms simultaneously.

Calendar: for viewing the calendar. You can create, edit and view events.

Internet browser.

Calculator: for arithmetic calculations.

SIM menu.

Bluetooth: settings, viewing devices, connectivity status.

Settings

Call settings: the menu allows you to configure the number of active SIM cards, forwarding options, call barring, auto-dialing, auto-recording of calls and others.

Phone settings: contains settings for date and time, interface language, quick access keys, scheduled power on/off settings. Also, this menu allows you to reset to factory settings

Display: settings for background images, display contrast, screen backlight time and keys.

Security: allows you to configure SIM card lock, phone lock, automatic keyboard lock and lock certain phone functions. This menu also contains the blacklist control menu.

Profiles: the menu is designed to adjust sound profiles, i.e. volume, ringtones, key sounds, and system settings for different conditions of using the phone, such as outdoors, indoors, silence, and more.

It is possible to edit the built-in settings. To do this, you need to click on Options → Settings.

To activate a set of settings, you need to select a profile in the menu and press the central button.

Connections: allows you to configure GPRS, specify the default data card, configure the data account, and select the network selection method — manual or automatic.

Games

This menu contains the Sokoban game.

Troubleshooting

The following recommendations may help to solve some problems with the phone. If problems occur, try to solve them yourself according to the following recommendations. If the problem is not solved, contact the Sigma mobile service center.

Check whether the battery is charged and whether the problem persists after reloading the device.

Try to restore factory settings via Settings → Phone → Default settings (password by default: 1122).

Problems with the memory card mostly occur in case of memory card failure. Thus, firstly check the card separately. We also recommended: taking out and reinserting the

memory card in the slot, checking whether the card is installed in the slot correctly, and reloading the phone.

The phone does not turn on: check battery charge, connect the charging device once more, and wait at least 10 minutes. Press and hold the Power button for at least 5 seconds. If the device does not turn on, contact the service center.

The battery is quickly losing charge: the following reasons may account for increased battery loss: low air temperature, active usage of media programs, large distance to the cellular tower of the operator.

The battery does not charge: check the charging adapter's connection to the plug. Use only the charging adapter and cable included in the set.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrectly dialed phone number, activated function of Call barring. Try to change your location, check the level of the connection signal, switch the phone to default settings. Contact the service center.

Low receiver volume: during the call press the «Up» button to increase volume. Adjust the call volume in profiles. Check the signal of cellular connection.

Passwords

Requests to input the following passwords may pop up while activating and using the phone:

Phone password: request occurs during activation. This is the general lock password. By default, the password is 1122.

PIN code: if the PIN verification function is enabled, you must enter the code provided with the corresponding SIM card.

PUK code, PIN2 code: also provided with SIM card.

Privacy code: request occurs if privacy is enabled in security settings, when activating the locking functions.

Note. Be careful when setting the lock passwords: if the passwords are lost, the phone's functionality can be restored only at the service center.