

Thank you for buying the X-style 31 mobile phone. This manual includes the description of the main functions of the phone.

X-style 31 allows you to use 2 GSM SIM cards in dual standby mode, meaning that in standby mode both cards are online. Whereas during the call 1 card works in active mode and 1 other card is unavailable.

The content of the manual is correct. The description of some functions may vary due to changes in software or provider services. The company keeps the right to make changes to the technical specifications without previous warning.

Key remarks on safety measures

This phone is designed for calling and receiving calls, sending SMS messages, surfing the Internet (may be unavailable) etc. Read the section below very carefully and strictly follow the instructions.

The phone doesn't contain any materials harmful for health.

- Do not use the phone out in the open during thunderstorms.
- Do not subject the battery to high temperatures, explosive and flammable liquids.
- Turn off the phone in situations when using it can cause danger or other difficulties.
- Do not put the phone in heating devices such as microwave ovens, stoves, or heaters.

- Do not try to open the mobile phone's frame. If the phone or any of the accessories do not work properly, please contact the closest authorized service center.
- Use only the accessories and charging devices assigned to this model. Do not use defective or second-hand chargers.
- Do not let the battery short circuit.
- If you use any personal medical devices, please make sure that the device has sufficient protection from radiation in the radio-spectrum. Turn off the phone in medical institutions if it is required according to the inner regulation rules.
- Do not use the phone while driving. Follow the rules for mobile phone usage behind the wheel.
- Keep the phone, as well as all its components and accessories, in a place inaccessible to children and pets. They may damage the device or accidentally choke on small details.
- Avoid bringing the phone into contact with water.
- Do not use potent chemicals, dissolvents or bleaches to clean the phone.
- Do not subject the device to direct sunlight.
- To avoid getting heavy metals, acids or chemicals in the water or the ground and causing significant damage to the environment, the used battery should be utilized by the end of the term of service according to the requirements of the law. Failure to comply with the legislation leads to legal accountability. More information on the safe utilization of lithium-ion batteries may be obtained at the closest specialized service center.

Specifications


Phone, frequency bands	GSM 900: 880-915 MHz (Tx), 925-960 (Rx) GSM 1800: 1710-1785 MHz (Tx), 1805-1880 (Rx)
Number of SIM-cards	2 SIM (miniSIM). Dual SIM Dual Standby mode
Messages	SMS
Bluetooth version and frequency band	V3.0, 2400-2483.5 MHz
Display	2,8'', colour LCD, 240x320 pix
Camera	0,3 MP
Supporting formats	MIDI, AAC, MP3, WAV, JPG
FM-radio	87,5-108,0 MHz (built-in antenna)
Micro-SD	Up to 32 GB
Battery	Li-Ion, 3100 mAh
Maximum radiation power in the frequency bands the radio	Bluetooth: 4.32 dBm (2.7 mW). GSM 900: 33 dBm (2 W) GSM 1800: 29.2 dBm (832 mW).

equipment works on	
-------------------------------	--

Package includes:

- Mobile phone
- Battery
- Charging device
- OTG adapter
- User manual
- Warranty card


Phone's appearance

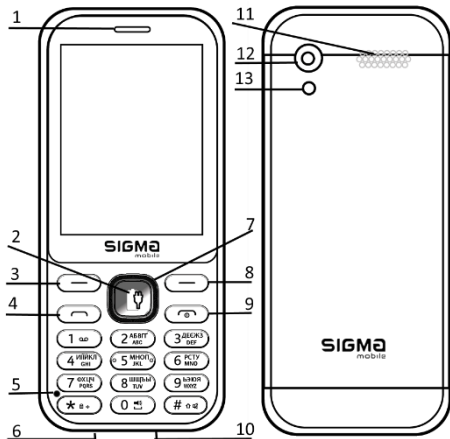

1	Front dynamic
2	OK key (Press and hold to activate the Smart Charger function)
3	Left soft key (LSK)
4	Calling\receiving a call

5	Microphone
6	USB Type-C port
7	Navigation buttons
8	Right soft key (RSK)
9	Reject\cancel\display activation (press and hold to turn on or turn off phone)
10	3.5 mm headset port
11	Speaker
12	Camera
13	Camera flash/flashlight

Inserting the SIM cards and memory card

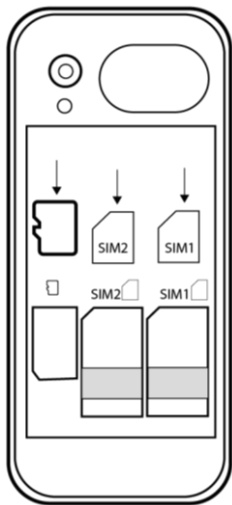

Open the back cover and take out the battery.

Insert the SIM cards in the proper device slots.

Then insert the microSD card, if needed.

Reinsert the battery, making sure that the battery contacts fit the phone contacts.

Be careful, as broken card or battery contacts lead to device failure and cancelling warranty.

Close the back cover.

Turn on the phone by pressing and holding the End Call button.

We recommend fully charging the battery before first use.

Power the device on\off

To power the device on or off, press and hold the «End Call» button until the display is activated/until shutdown.

Locking and unlocking the device

Device locking occurs automatically or after consequent pressing of the left soft key (LSK) and the «*» key. Unlocking occurs through consequent pressing of the left soft-button and «*» key.

Keys specification

Call button 	Press: to call the dialed number. During an incoming call: receiving an incoming call. In standby mode: viewing the Call history.
End Call button 	Press: to reject the call when there is an incoming call; to lock the keyboard (if adjusted in settings). Press and hold: to turn the phone on/off. In FM radio mode, press: to exit the FM radio menu.
Navigation keys Up/Down/Right/Left. Central key	In standby mode: using Up/Down/Right/Left keys for quick access to 4 menu items (customizable). In the menu: use the keys to choose the required menu or function. In the audio player and FM radio mode: switch to the next/previous saved station.

	Central key. In standby mode: press to open the Menu. In the menu: select an action, confirm the action with OK. In FM radio mode: turn on/off. In audio player mode: play/pause. Press and hold to enable/disable the Smart Charger function.
0 key	Press: to dial 0. Press and hold: to turn the flashlight on/off.
Keys 1-9	Press: to dial a number. Press and hold the keys 2-9 to speed dial the previously installed numbers.
* key 	Press to enter the characters *, +, P, W. Press left soft key then press * key to lock/unlock the keypad.
# key 	Press to enter the symbol #. Press and hold: to switch user profiles from General to Silent.
Left soft key 	In standby mode: press to open the Menu/open Options. Successive pressing of LSK and *: to lock/unlock the keypad.
Right soft key 	In standby mode: press to open the Phonebook. In the menu: press to return to the previous page.

The meaning of the symbols on screen

	Connection signal
	Battery charge indicator
	New message
	Missed call
	Silence profile activated
	Outdoor profile activated
	Meeting profile activated
	Alarm clock is active
	Bluetooth mode on
	GPRS Internet is active
	Keyboard locked

Basic operations

Calling

Dial the phone number using the phone's numeric keypad or go to Call history and press the "Call" button to make the call. You can also make a call from the "Phonebook" menu by selecting the desired phone number.

During call you can also: switch to the speakerphone mode, start a recording of the call, add another caller to communicate in conference mode, turn the microphone on/off, etc.

Primary SIM Mode

With two SIM cards installed, it is possible to assign one of them as the main one for outgoing calls. To do this, go to Menu—Settings—Dual SIM—Primary SIM and select the desired value. The *Always Ask* option means that you will need to select a SIM card for an outgoing call after pressing the Call key.

Speed dial

Open the main Menu — Phonebook — Options — Settings — Speed Dial.

In this menu, you can save up to 8 phone numbers for speed dialing, which will correspond to numbers 2-9 on the phone's keypad. Phone numbers are selected from the phonebook. Pressing and holding keys 2-9 in standby mode will call the specified number.

WARNING. *Setting up the function is possible only when a SIM card is installed.*

Connecting to the PC

To copy files to/from the phone (provided a memory card is installed) a connection to a personal computer is required. This connection requires a USB-A<->USB-C cable (not included). Connect the cable to the phone and PC, select the USB drive option on the phone screen. On the PC, use standard tools for working with removable media.

Accepting/declining a call

During an incoming call press the “Call” button to accept the call.

Press the “End Call” button to reject the call.



Sound modes

Ringtones, volume and other parameters may be adjusted in the User Profile settings (Menu—Profiles). 4 preinstalled profiles are available: General, Silent, Meeting and Outdoors. To enable the profile, press Options—Enable, to edit: Options—Configure.

Using the phone's Menu

To access the Menu, press the Menu key (LSK) or the Central key. To move between items, press the Up/Down/Right/Left navigation keys.

The menu includes the following items:

Phonebook

The Phonebook menu contains contacts stored in the phone and on SIM cards. The phone memory is intended to store 500 contacts.

Contacts are listed in alphabetical order. The search bar allows you to find contacts, the search is organized by the first letters of the name of the contact. To switch the method/language of the search press the # key.

New contact: add a new contact. Before creating one, you have to choose where to save the contact.

To view the contact, select it with the cursor and press the central navigation key.

To make a call, press the Call button.

Additional options may be accessed with the left soft key.

Send SMS: create and send a text message to a contact.

Edit: edit the contact.

Delete: delete the selected contact.

Copy: Copy contact to the phone or the SIM card.

Add to Blacklist. Add to Whitelist.

Select multiple: select multiple contacts for further copying / deleting / grouping SMS.

Ways to add a new contact to the Phonebook:

1. Saving the dialed, accepted or missed phone number from Call history: in Call history press Options—Save to Phonebook.
2. Saving the new contact directly through the “Phonebook” menu: Menu—Phonebook—Add new.

For settings go to Menu—Phonebook—Options—settings. You can set up speed dial (if a SIM is installed), copy/move/delete contacts and back up the contacts.

When backing up contacts in the root of the memory card, a system file named ~vcard.vcf is created. When restoring contacts, data is taken from the same file.

Call center

Go to Menu—Call center—Call history to view the received, dialed, and missed calls. The following actions are available for each call in the Options menu: View details, Call number, Write a message, Add to contacts, Delete.

In Call settings you can set up:

- Blacklist
- Whitelist
- Turn autoredial on/off
- Turn automatic call recording on/off
- Answer mode

- Call time reminder
- Call divert
- Call waiting
- Call barring

Extras

The following programs are available in this menu:

Calculator – for arithmetic calculations.

E-book – for reading texts in TXT format (UNICODE txt files).

Torch – turn on/off.

Calendar – for viewing the calendar.

Alarm – allows you to set up several alarms simultaneously.

Multimedia

Note: It is best to use the following functions in the menu "Multimedia" with an installed memory card.

This section contains programs for working with photos, videos, and sound.

Image viewer – for viewing images.

Video recorder – for recording videos.

Video player – for viewing videos.

Audio player – for listening to audio files. To create a playlist, copy the music files to the memory card in the "My music" folder. To adjust the volume, use the * (to decrease) and # (to increase) keys.

Sound recorder – for recording sound.

Messages

This menu contains everything you need to send, store, view and delete SMS messages.

Write message: select to write and send (or save) a new message.

Inbox: folder with received messages.

Outbox: folder with sent messages.

Drafts: unfinished messages.

Sent: messages that have been sent.

Settings: settings for sending SMS.

The Settings menu allows you to set up the SMS center numbers for both SIM cards, the validity period of the message, the means of receiving delivery status reports, adjust the settings for saving messages, and turn push notifications on/off.

User Profiles

This menu is intended for setting up sound profiles, i.e. volume parameters, ringtones, vibrate mode, button sounds and systems for different conditions of using the phone, such as: General, Silent, Meeting, and Outdoors.

Built-in settings are subject to editing by pressing Options and Settings.

To activate a set of settings choose the profile in the menu and press the central navigation key.

Camera

The program for taking photos is placed in a separate menu. To capture a photo, press the central navigation key. To switch to settings, press the Options key (LSK).

Note. Before using the Camera installing a memory card is necessary.

Settings

Smart Charger: turn the function on/off. To connect other devices, use the OTG adapter.

Note. Please turn off the function immediately after you stop using it or before charging the phone.

Phone settings: contains date and time settings, interface languages, settings for shortcut buttons and display. Display

settings include: wallpaper settings, screen autolock, LCD backlight settings, date and time settings, etc.

Security: enables you to set up SIM-card lock, phone lock.

Network: allows you to choose the method of network selection – manual or automatic.

Dual SIM settings: managing SIM cards – enable/disable SIM, turn Flight Mode on/off.

Connectivity: Bluetooth settings.

Restore settings: enables you to reset your phone to factory settings.

WARNING. Reset code 1122.

FM radio

The program for listening to the radio is placed in a separate menu. To turn the radio on/off, press the center key. To search for radio stations, press Right/Left. For precise frequency tuning press Up/Down. Use the * (to decrease) and # (to increase) keys to adjust volume. In the Options menu you can search for channels automatically and manually, view saved stations and enable/disable background playback.

File manager

The file manager allows you to work with files in the phone memory and on the memory card. The following operations are available: copying, moving, deleting and creating files.

Games

This menu allows you to play the “Snake” game.

Troubleshooting

The following recommendations may help to solve some problems with the phone. If problems occur, try to solve them yourself according to the following recommendations. If the problem is not solved, contact the Sigma mobile service center.

Check whether the battery is charged and whether the problem persists after reloading the device.

Try to restore factory settings via Settings – Phone – Default settings (password by default – 1122).

Problems with the memory card mostly occur in case of memory card failure. Thus, firstly check the given card separately. We also recommended: taking out and reinsert the memory card in the slot, checking whether the card is installed in the slot correctly, and reloading the phone.

The phone does not turn on: check battery charge, connect the charging device once more, and wait at least 10 minutes. Press and hold the Power button for at least 5 second. If the device does not turn on, contact the service center.

The battery is quickly losing charge: the following reasons may account for increased battery loss: low air temperature, active usage of media programs, large distance to the cellular tower of the operator.

The battery does not charge: check the charging adapter's connection to the plug. Use only the charging adapter and cable included in the set.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrectly dialed phone number, activated function of Call barring. Try to change your location, check the level of the connection signal, switch the phone to default settings. Contact the service center.

Low receiver volume: during the call press the «Up» button to increase volume. Adjust the call volume in profiles. Check the signal of cellular connection.

Passwords

Requests to input the following passwords may pop up while activating and using the phone:

Phone password: request occurs during activation. This is the password for general locking. The default password is 1122.

PIN code: if PIN code check is active, it is required to input the code which was assigned to your SIM-card.

PUK code and PIN2 code are also assigned to the SIM card.

Be careful while installing the passwords: if they are lost, renewing phone functionality is only possible in the service center.