

We thank you for buying mobile phone X-treme PV68. This manual includes description of main mobile phone functions.

The phone X-treme PV68 allows to use 2 SIM cards of GSM standard at Dual Standby mode, i.e., in standby mode there are 2 cards in the connection; during the call 1 card works in active mode, 1 other card are unavailable.

The content of this manual is right. The description of some functions may differ due to changes in software or provider services. The company keeps the right to arrange changes in technical specifications without previous warning.

Important safety notes

This phone is designed for making and receiving calls, sending SMS messages, accessing the Internet (if provided), etc.

The following maintenance instructions are intended to help you use your phone correctly, without endangering the safety of people and property, and to keep the device in working order. Please read this section carefully and follow the instructions in it carefully.

The phone does not contain substances harmful to health (according to DSTU EN50581).

- Do not use the phone in the storm outdoors; do not expose the battery to high temperatures, hazardous and flammable liquids.
- Turn off the phone in case the phone usage may cause interference or dangerous.

- Do not put the battery, mobile phone and charger in a microwave oven or high pressure equipment, or may cause circuit damage and fire and other accidents.
- Do not try to open the body of the phone. If the phone or any of the accessories are not working properly, contact your nearest authorized service center.
- Use only accessories and chargers, that is designed for this model. Do not use defected USB-cables or chargers.
- Please do not short circuit battery equipment.
- Interference might be caused by poor shielding performance of medical devices such as hearing aids and heart pacemakers in the use of radio frequency devices including mobile phones. Consult medical device manufacturer or your doctor before using mobile phone. Please turn off the phone in which place posted notice required to. These places include hospitals and rest homes and other medical establishments. Because these facilities may be using equipment sensitive to external RF signal.
- Do not use mobile phones while driving. Follow the rules for using mobile phones while driving.
- Keep your phone and all its parts and accessories out from children and pets. They may accidentally damage these things or choke small details.
- Do not wash the phone while charging. It may cause the electric shock. Be confident that USB-cable and charger are off, before using the device
- Do not use chemical reagents or abrasive cleanser, otherwise it may damage the cabinet. Use only a damp or anti-static cloth to wipe the mobile phone. Do not use dry cloth with static electricity to wipe the phone.

- Please do not put the mobile phone under direct sunlight.
- To avoid of getting heavy metals, acids, lye in water or soil, causing significant damage to the environment, utilize used battery according to the law. The legal liability arises in case of infraction about the utilization norms.
- For information about safe utilization of lithium-ion batteries can be obtained at your nearest qualified service center.

ATTENTION!

This phone is protected from moisture and dust according to the IP68 standard.

This means water resistance and protection against dust ingress.

The standard does not provide for shockproof. The phone, due to additional seals and strong fasteners, has increased vibration resistance, but requires caution in use.

Be careful with phone plugs, as well as follow general safety precautions.

If the penetration of moisture into your phone is caused not by factory defects, but by mechanical damage or loosely closed plugs, the warranty repair of the device will not be carried out.


Specifications

Phone, frequency bands	GSM 900: 880-915 MHz (Tx), 925-960 (Rx) GSM 1800: 1710-1785 MHz (Tx), 1805-1880 (Rx)
Number of SIMs	2 SIM (mini-SIM). Dual SIM Dual Standby Mode
Notice	SMS
Mob. Internet	GPRS
Bluetooth, Version, Frequency Band	V3.0 2402-2480 MHz
Display	2.4", color LCD, 320*240 px
Format support	MIDI, AAC, MP3, WAV, JPG
FM Radio	87.5-108.0 MHz (built-in antenna)
Micro-SD	Up to 32 GB
Battery	Li-Ion, 2500mAh
Max radiation power in the frequency bands on which the radio equipment operates	Bluetooth: 3.73 dBm (2.4 mW) GSM 900: 32.27 dBm (1.687 W). GSM 1800: 28.89 dBm (740 mW).

Package includes

- Mobile phone
- Battery
- Charging device
- User manual
- Warranty card


Phone's appearance.

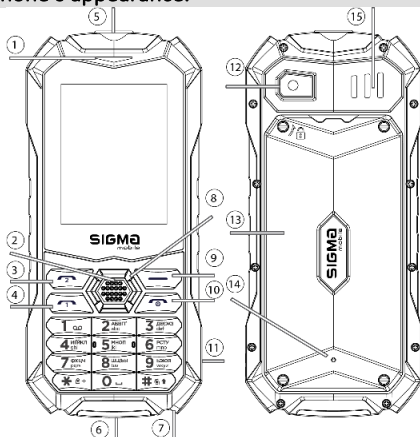

1	Receiver
2	Central key
3	Left soft key (LSK) / Call SIM2
4	Call SIM1 / Receive a Call
5	Torch
6	USB Type-C / Audio compartment
7	Microphone
8	Control keys

9	Right soft key (RSK)
10	Cancel/End/Power
11	Holes for the strap
12	Camera
13	Battery cover
14	Membrane of pressure normalization
15	Speaker

Inserting SIM cards and memory card

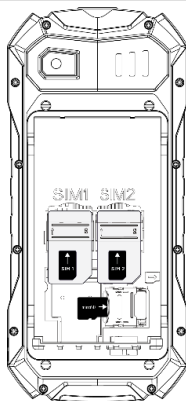

Unscrew screws and open the back cover.

Insert SIM cards in proper device slots.

Insert also micro-SD card, if required.

Insert battery, controlling that battery contacts fit phone contacts.

Be careful, broken card or batteries cards lead to device breakage and cancelling warranty.

Close back cover.

Power on the phone by pressing and holding the End key.

It is recommended to arrange full battery charge before first use.

Power on/off the device

To power on the device, press and hold the End button until the device screen activates.

To power off, press and hold the End button until the device turns off.

Locking and unlocking the keyboard

Device blocking occurs automatically (if auto-lock is on) or by pressing the Cancel key (if set in Settings). Unlocking - by alternately pressing the LSK and the "*" key.

Keys specification

 Call1 Call2	Call1: To call a dialed number from SIM1. During an incoming call: Receiving an incoming call. Standby: View your call log. Call2: To call a dialed number from SIM2
 End	Press: to reject a call when an incoming call is made; to lock the keypad (if configured) Press and hold: To turn the phone on/off. In FM radio mode, press: to exit the FM radio menu
 Navigation keys Center key	Standby: Use the Up/Down/Right/Left keys for quick access to 4 menu items (customizable). In the menu: use the keys to go to the required menu or function. In audio player and FM radio mode: Right/Left – Go to next/previous saved station/ringtone, Up/Down – Volume control.


	Center key. In standby mode: press – go to the Menu. In the menu – select an action, confirm the action OK. In FM radio mode – off/on, in audio player mode – play/pause. Press and hold – Turn on/off the flashlight.
Keys 0-9	To dial. Pressing and holding keys 2-9 – to quickly dial preset numbers (speed dial).
Key*	To enter the characters *, +, w, p.
Key #	To enter the #. Press and hold – to toggle User Profiles
LSK	In standby mode, go to the menu. Go to Options. Call SIM2
RSK	In standby mode, go to the address book. In the menu, return to the previous page. In FM radio mode, press: to exit the FM radio menu

Meaning of icons

	Network signal
	Battery charge indicator
	New message
	Missed call
	Silent profile activated
	Outdoor profile activated
	Meeting profile activated
	Alarm clock is active
	Bluetooth switched on
	GPRS Internet is active

Make a call

 To call - dial number on digital keyboard in local or international format, or choose number from phone contacts list, and press Call1



button or Call2 button . To cancel call – press Cancel button. You can also make a call from the Contacts menu by selecting the contact you want

During call it is also possible to: switch volume in a speakerphone mode, start conversation record, add more persons to conference conversation, turn off\switch on microphone and etc.

Speed Dial

Go to the Main Menu—Contacts—Options—Advanced—Speed Dial.

In this menu, you can save up to 8 phone numbers for speed dialing, corresponding to the numbers 2-9 on the phone keypad. Phone numbers are selected from the phone book or entered manually. Pressing and holding keys 2-9 in standby mode will invoke the given number.

Attention. Setting the function is available only when the SIM card is installed

Connecting to a PC

To copy files to/from the phone (provided that a memory card is installed), you need to connect to a personal computer. This connection requires a USB-A< >USB-C cable. Connect the cable to your phone and PC, on the phone screen, select the USB drive option. On a PC, use standard removable media tools

Receiving a call

When a call comes in, press the "Call" button to receive an incoming call. Press the "Hang up" button to reject an incoming call.



Sound mode

Ringtones, volume, and other parameters are configured in the User Profiles settings (Menu—Profiles). There are 5 programmed profiles available: Normal, Silent, Meeting, Indoor, Outdoor, Earphone. To enable the profile, press the center key, to edit: Options—Settings.

Use Phone Menu

To access the device's menu, press the left soft key or the center navigation key.

The menu has the following sections:

Contacts: phone book of telephone contacts and SIM-cards;

Multimedia: This menu contains the media functions of the device: video camera, gallery, audio player, video player, FM radio, voice recorder.

Call logs: register incoming, outgoing and missed calls;

Settings: call settings, display settings, phone settings, security settings, connections

Messaging: for sending SMS messages and reading incoming messages;

Profiles: Configure audio profiles

Games

Camera. Separate menu for launch camera

Tools: Alarm clock, Calendar, Stopwatch, Torch light, Calculator, Files manager, Ebook, Bluetooth, SIM menu

Contacts

The Contacts menu is your phone book, which contains contacts stored in the phone and on SIM cards. The phone memory is designed to store 500 contacts.

Contacts are in alphabetical order. The search bar allows you to find contacts. To switch the method / language of the search press the # key

Adding a new contact: Choose "New" in the options, choose a place to save the contact, enter a name and phone number, press Options—Save.

For one contact, you can add the following information: Name (line length - 40 characters), Two Phone numbers, Group, Icon, Ringtone

To view the contact, select the cursor and press the center navigation key.

For a call, press the call button.

Additional options open with the left soft key.

New message: Create and send a text message to the contact.

Edit: edit the contact

Delete: delete the selected contact.

Copy: Copy contact between phone and SIM card.

It also has the ability to: View memory status and delete all contacts, make backups - export - or restore contacts - import - (only if there is a memory card)

When backing up contacts in the root of the memory card, a system file named vcard.vcf is created. When restoring contacts, information is taken from the same file.

Multimedia

Caution: It is desirable to use the following functions in the menu "Multimedia" under the condition of the installed memory card.

This section contains programs for working with photos, video and sound.

Video camera – for video recording.

Audio player – to listen to music files

To play/pause, press the center key. To go to the next/previous file – Right/Left. Use the Up/Down keys to adjust the volume. To create a playlist, copy the music files to a memory card. To change the settings, go to Options—Settings. To edit playlists, go to Options—Playlist.

Video player – for watching video recordings.

Images – to view images.

FM radio – for listening to FM radio stations.

Note! *In this model, FM radio operates with a built-in antenna. To improve the reception quality, you may need to connect a wired headset as an antenna. The sound of the FM radio and audio player is transferred to the external speaker and wired headset.*

To turn on/off, press the center key. To search for radio stations, press Right/Left. Use the Up/Down keys to adjust the volume. The Options menu has the ability to automatically and manually search channels, view saved stations, record files in a file and enable / disable background playback.

Sound recorder - for recording sound.

Call logs

This menu contains a register of incoming, outgoing and missed calls and allows you to: view information, dial a contact's number, send an SMS message, add a new number to contacts, add a number to a blacklist, delete call information, and more.

Settings

Call settings. The menu allows you to configure the number of active SIM cards, divert options, call barring, auto-dialing, and more.

Phone settings: contains date and time settings, interface language, shortcut key settings, energy saving settings, scheduling power on/off settings. Also, this menu allows you to reset to factory settings (**WARNING. Reset code 1122**)

Display: Background settings, display contrast, screen backlighting and keystrokes

Security: Provides the ability to configure SIM card locking, phone lock, automatic key locking and blocking of individual phone functions (Privacy). This menu also contains a menu for managing the functions Blacklist, Whitelist, Mobile tracker settings.

Connections: allows you to set up GPRS, specify a default data transfer card, set up an account for data transmission, choose a way to select a network-manual or automatic.

Messaging

This menu contains everything you need to send, store, view and delete SMS messages.

New SMS: Select to write and send (or save) a new message.

Inbox: Folder with received messages.

Outbox: Folders with sent messages.

Drafts: incomplete messages.

Sent: Messages that have been sent.

Settings: settings for sending SMS

The Settings menu allows you to set the SMS center numbers for both SIM cards, set the validity period of the message,

configure receipt of the delivery status report, adjust the settings for saving messages, switch off or enable push messages.

Profiles

The menu is designed to configure sound profiles, i.e. volume settings, ringtones, vibrate mode, key sound and system for different phone usage conditions such as: outdoor, indoors, silent, and more. It is possible to edit the built-in settings. To do this, press Options and Settings. To activate the set of settings, you must select a profile in the menu and press the center button.

Games

In this menu there is an opportunity to try the game "Sokoban"

Camera

Note: *To take a picture, you need to install a memory card*

To capture a photo, press the center key. Press Options to go to the settings

Tools

The following programs are available in this menu:

Calendar - to view the calendar. It is possible to create/edit/view events

Alarm clock - allows you to set up several alarms.

Calculator - for arithmetic calculations.

Stopwatch

World Time

SIM menu

My files. The file manager allows you to work with files in the phone's memory and on the memory card. Operations such as copying, moving, deleting, creating folders are available.

Bluetooth - setup, device review, device connection

Torch on/off

Troubleshooting

Following recommendations may help to solve some problems with phone independently. In case problems occurs try to solve it yourself with following recommendations. If problem is not solved, contact to Sigma mobile service center.

Check whether battery is charged and whether problem continues after device reset.

Try to restore factory settings through menu «Settings - Phone settings – Restore factory settings» (password by default – 1122)

Problems with memory card mostly occurs in case of memory card breakage. Thus, firstly check given card separately. Also recommended to: take off and insert memory card in port, check whether card is put in port correctly, reload phone.

Phone does not power on: check battery charge, repeatedly connect charging device, and wait at least 10 minutes. Press and hold the button «Power» not less than 5 second. If device does not power on contact in service center.

Battery discharges rapidly: reasons for increased battery charges may be: low air temperature, active using of media programs, huge distance to cellular tower of connection operator.

Battery does not charge: check charging adapter connection to plug. Use only complete charging adapter and cable.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrect input of contact number, activated function of calling prohibition. Try

to change location, check level of connection signal, wipe phone to factory reset. Contact in service center.

Low receiver volume: during conversation, press button «Up» to increase volume. Set volume during conversation in profiles. Check signal of cellular connection.

Passwords

When loading the phone and during use, you may be prompted to enter the following passwords:

Phone password - 1122: The prompt occurs during download (if it is set in Menu—Settings—Security—Phone locked). This is the password of the general lock.

Privacy Code: Asked if privacy protection is enabled in the security settings when activating blocked features.

Factory reset password - 1122

PIN: If PIN verification is enabled, you must enter the code provided with the corresponding SIM card.

PUK code, PIN2 code are also provided with a SIM card.

Be careful installing blocking passwords: if they are lost, to renew phone functionality is possible only in service center.